


# CLEAN. KILL. COAT.

## 3-Step Process for Flood & Water Damage

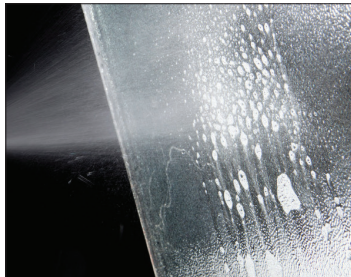

### Step 1: CLEAN

Thoroughly clean all surfaces.

Advanced Peroxide Cleaner (8314) with optional additives HydroBoost (8313) or HydroBrite (8314)



### Step 2: KILL

Disinfect/Sanitize surfaces to kill bacteria and other microbial organisms that remain on the surface after cleaning.

ShockWave Concentrate (8310) or ShockWave RTU (8316)



### Step 3: COAT

To prevent the regrowth of mold and provide long lasting protection.

Aftershock (8390), IAQ 6000 White (8360) or IAQ 6100 Clear (8361)

